

EA630 Plus Rugged Smartphone



Quick Start Guide

609206G V1.1

Package

Please make sure the following contents are in the EA630 Plus gift box. If something is missing or damaged, please contact your Unitech representative.

The package contents

- EA630 Plus Terminal
- Battery
- Quick Start Guide


Optional accessories

- Stylus
- Hand strap
- Quick charge adaptor (via USB type C cable)
- USB 3.0 Type-C cable
- 9H glass screen protector
- Gun grip: standard/ UHF
- Single Slot Charging cradle
- Single Slot USB cradle
- Single Slot Ethernet cradle
- 4 Slots Ethernet cradle
- 4 Slots Terminal Charging cradle


Product View



Product View

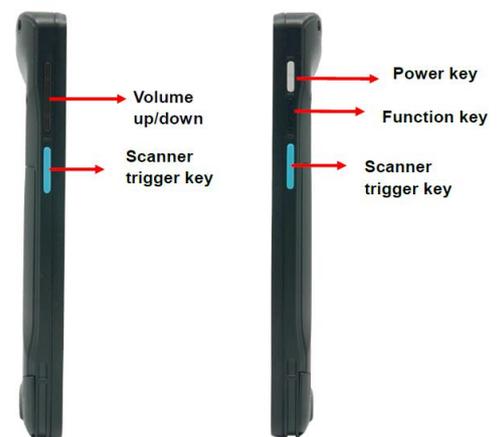

Barcode scanner window

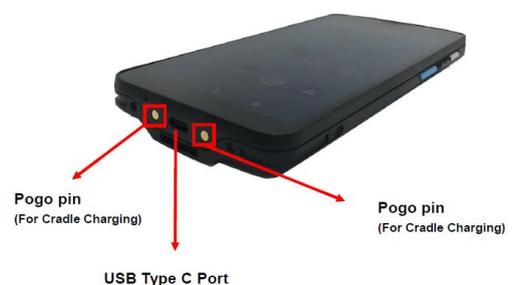

Remove the Battery and Battery Cover

Remove the battery cover in the direction as shown in the picture below.

1. Unlock the battery cover by turning the knobs a quarter of a turn (90°). Lift the battery cover up to 45 degrees (45°), then gently pull the cover off.



2. Pull the battery up to remove it.



Charging the battery

Charge the terminal for about 24 hours before first use. For regular use, you can charge the terminal for 4 hours to recharge the battery to full capacity., Please use the USB charging cable or the cradle to charge the terminal. Connect the Type-C USB cable to the USB port on EA630 Plus and the other end of the USB cable, and connect to AC power adapter into the electrical outlet on the USB plug. The charging LED indicator on EA630 Plus shows red light when it is in charging state.



LED	Description
Red Light	<ul style="list-style-type: none"> ■ Battery Charging ■ Twinkling to indicate battery low status (less than 15%)
Green Light	<ul style="list-style-type: none"> ■ Battery Fully charged ■ Barcode scan good read
Blue Light	Message
If scanner app is running, LED control by scanner app.	
No LED (Red and Green) display when battery is out(even AC IN)	

Install the Battery Cover

Insert the battery cover in the direction as shown in the picture below.

1. There are three hooks on the battery cover. Align the hooks with the recesses on the battery compartment.



2. Insert the battery cover up to 45 degrees (45°), from top to bottom.



3. Align the batter cover with the recesses of the battery compartment, and press the battery cover down to secure in place. Make sure there is no gap between the device and the battery cover.



4. Lock the battery cover by turning the knobs a quarter of a turn (90°). Make sure the battery cover is securely closed, or you may be unable to turn on the terminal.



WARNING! There is a risk of fire and burns if the battery is handled improperly. DO NOT disassemble, crush, puncture, short external contacts, or dispose the battery pack in fire or water. DO NOT attempt to open or service the battery. Dispose of used batteries according to local recycling guidelines in your area.

CAUTION!

- To ensure the unit working properly, please keep all connectors away from the contaminants staying inside of them such as dust, grease, mud, and water. The negligence may cause the unit with no communication, short circuited, overheated and so on.
- If the connector is damaged, please ensure the connector is being fully repaired before using the unit to avoid causing short circuited.



<http://www.ute.com>