



Symphone N2S
mobile computer
user guide





User Manual

Symphone N2S

1. Safety notice



Please do not turn on the phone where the use of wireless devices is forbidden, such as aircrafts, medical facilities and nearby medical equipment.



Do not place the device in the proximity of equipment with a strong electromagnetic field.



Do not use the device while driving a vehicle.



Please keep the device away from equipment with a strong magnetic field. Otherwise, this might lead to the loss of stored data.



Please power off
the device when
requested in
medical areas.



Do not use this
device near
flammable
substances, such
as a gas station.



Please put the device in airplane mode when entering a plane, so the wireless signal does not interfere with the plane control signal.



Please keep the device out of reach for children.



When using high precision electronic equipment, please turn off the device to prevent possible electronic equipment failure.



Please use the authorized batteries and charger, otherwise, it may damage the device.



Device should only be serviced by a Newland authorized repair partner. Otherwise, warranty will be void.



When using the device, please comply with the local laws and regulations.

2 Brief Introduction

Layout



Item	Name	Definition
1	OK Key	Enter
2	Navigation Key	UP/Down/Left/Right
3	Back Key	Navigates back
4	Dial Key	Dial a call or answer a call
5	F Key	User defined
6	Dot Key	Enter the decimal point
7	Del Key	Delete content
8	End Call Key	End a call or return to the home screen
9	Number Keys	Input numbers

10	Power Button	Power-on/power-off/suspend/wake-up
11	Scan Button	Press to Scan
12	Camera	Take a picture or video
13	LOCK	Lock or unlock the battery cover
14	FUNC Key	Self-define side key
15	Scan Button	Activate Barcode Scanner
16	Barcode Scanner	To aim the Barcode Scanner
17	Headset port	Plug in a 3.5mm headphone
18	DC port	DC charging
19	USB port	Data communication or charging

Screen icons

Icon	Definition	Icon	Definition
	Signal strength		The headset connection
	Battery capacity		Answering call
	Data transfer mode		Flight mode
	Bluetooth		Upload
	Bluetooth data transfer		Download
	Available Wi-Fi hot spots		Wi-fi connection status

Battery charging

When charging, make sure to use the original charger and USB data cable.

When the power is low, you will be notified by a flashing battery icon; when the power is decreased further, there will be a tone and messages stating that the power is running low; when the power is further reduced, the product once again will issue a prompt tone, and subsequently shut down.

3 .Getting started

Install battery / remove battery

Please turn off the device before removing the battery, loosen the LOCK button, remove the battery cover and then pull out the battery.

Align the battery metal contacts (positioned on the top left of the battery) to the metal contact points on the left side of the battery compartment. Slide the battery in top first, then push down to secure.

Install / remove Micro SD card

Install Micro SD card: remove the terminal cover and the battery, insert the Micro SD card to the card slot with its metal contact piece side down.

Remove the Micro SD card: remove the terminal cover and the battery, take the Micro SD card out.

Install / remove RUIM card

- 1 . Install Micro SD card: remove the terminal cover and the battery, insert the Micro SD card to the SD card slot with its metal contact side down
- 2 . Remove the Micro SD card: remove the terminal cover and the battery, take the Micro SD card out.

4 . Basic Functions

Power on and power off

When the device is off, press and hold the on/off button to turn it on.

When the device is on, briefly press the on/off button to lock the screen.

When you press and hold the button you'll see a pop-up menu, select OFF and click the confirm button to switch it off.

Input number Directly

In Standby mode, click Numbers to input numbers on the number keypad.

If the input character is wrong, click the delete button to delete it.

To end a phone call or to cancel dialing, click the end call icon or end call button.



Activate GPS Function

1. First enter the setup menu interface, and then enter the location information and access, check "Allow access to my location," Turn on the GPS satellite positioning.

2. When signal is bad, please adjust the direction of the device in order to obtain better satellite reception. Please take note that buildings, trees, etc. will block the GPS satellite signal.

Activate NFC function

First enter the setup menu interface. Go to "more", click NFC and open the function.


Activate barcode scanner function

1. First enter the setup menu interface, and then enter the scan settings. Select the Enable Scan button.
2. Return to the Home screen, press scan button to scan a barcode.

5 . Making a phone call

In Standby mode, click the communication icon of the interface, then click the dial icon to enter the dial mode (alternatively, directly click the answer button to enter the dial mode).

Click the address book to search for a contact in the address book, you can also directly input the number you need to dial in the dial interface. Then click the dial icon to dial the phone number.

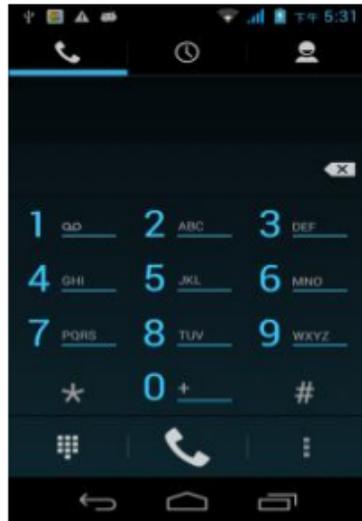

6 . Transfer documents to this device

The N5 allows you to take all kinds of documents with you. You can browse through pictures or watch instruction videos. In order to do so, follow the following steps:

1. Use the attached USB cable to connect the product to the computer
2. Drop-down status bar when USB is connected, click to open the USB storage device, and then click OK.
3. The computer will recognize this product as a removable disk. Browse to the removable disk, and then open the disk.
4. Copy the document to the memory cards.

7 . Lock the device

When locking the product, the interface will be closed, and the device will enter sleep mode. This avoids triggering the interface accidentally, but can also save battery power. When not using the device, press the power button, the device may still be locked. If having set a lock screen time, the device will

Automatically lock the screen after the standby time.

Unlocking the device

Press the on/off button or the hang up button to wake up the device. Hold the arrow icon at the left side of the screen with your fingers, then slide to the right to unlock the screen



8 Warning

Electronic Devices

- Switch the device off when it is near running electronic instruments. Otherwise it may cause interference.
- Devices which may experience interference: Hearing-aid, Pacemaker, Fire-annunciator, Automatic-gate and other automatic devices.
- Users who use medical-aids should confirm the affection of radio waves with the vendor
- Pacemaker vendors suggest that a pacemaker should be 15cm away from the device to avoid being interfered. The user should not put the device near their chest and should answer a call on the opposite side of the pacemaker to avoid interference.

Medical Sites

- Please do not take the device into a surgery room, ICU, CCU.
- Follow the rules and regulations of the medical site.
- Be careful with ring and vibration settings of the device.

Dangerous Areas

To avoid interfering with blasting operations, turn off the device and do not charge, remove or install the battery when in a blasting area or in another area with signs indicating that two-way radios should be turned off. Avoid:

- Fueling station
- Fuel tank (Below deck on boats);
- Fuel and chemical transfer or storage facilities;

- Areas where the air contains chemicals or particles such as grain, dust, or metal powder
- The areas with signs indicating easy-blasting;
- Any areas with signs indicating that two-way radios should be turned off;
- Any other area where you would normally be advised to turn off your engine;

Driving Safety & Flight Safety

- Using the device while driving (or operating the phone without a hands-free phone) is prohibited in some jurisdictions.
- Place the device in the holders when driving to prevent it from being unsecured in the event of a crash.
- Get to know your device and features, such as hands-free, earphone, Bluetooth, speed-dial, re-dial, and emergency speed dial;
- Please do not position the device on top of the airbags or in the area where airbags expand to, otherwise it may hurt the passengers in vehicle;

- Turn off the device before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your device while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air;

Storage Environment

- Keep away from magnetic devices (such as floppy disk) which may be susceptible interference. The device may erase the files to stored;
- Do not put the device, battery and charger into strong magnetic field such as a microwave oven and induction cooker, otherwise it may cause short or fire;
- Do not store the device, battery and charger in high temperature areas or low temperature areas for long periods of time;
- Please try to keep the ambient temperature from 0°C to 45°C when charging.

- To store the batteries, keep the ambient temperature between -20°C and 60°C .

high or low temperatures may cause a shorter battery life and a reduced capacity. This is especially the case for low temperatures.

- Keep metal stuff away from the receiver and speaker to avoid damage;
- Avoid shocking or crashing the device, battery and charger, it may cause damage, fire or leakage;

Operation Environment

- Do not use the device in dusty, wet and magnetic areas, it may cause circuit issues
- Do not turn on or turn off the device near the ears, this could affect your health;
- For your health, keep your body more than 2.5cm away from antenna when using GPRS;
- Avoid damaging your ears, please do not put the device near ears when using spe
- Keep your eyes away from the flash light while using it;
- Do not use the device during a thunderstorm. The device may malfunction and your risk of electric shock is increased;
- Keep the device away from TV, radiogram or PC;

- Use only Newland Europe B.V. approved batteries, chargers and other accessories;
- Follow the law and protect individual privacy;

Maintenance

- Stop charging and turn off the device before clearing to avoid a short and getting an electric shock;
- Do not use powder material or chemical material such as alcohol and benzene to clear the device and charger, otherwise it may cause damage and fire;
- Do not scrape and paint the surface of the device, residue may cause an allergic reaction. If you experience an allergic reaction, contact a doctor immediately;
- Do not disassemble and repair the device by yourself;
- If the device does not work normally, please ask the Service Center for help;

9 . Company Statement

Warning :

Newland Europe B.V. will not take any responsibility for any issues arising due to not following the regulation in this User Manual, or for improper use of the device.

Declaration :

Newland Europe B.V. reserves the right to make changes in the product performance without prior notice. The company is committed to improving the quality of their products and regularly introduces updated versions. As a result, the device's features, specifications or design written in the instructions may differ slightly from the actual device.



Symphone N2S



Newland

SCANNING MADE SIMPLE

Newland EMEA HQ

+31 (0) 345 87 00 33
info@newland-id.com
newland-id.com

D-A-C-H

+49 (6) 182 82916-16
info@newland-id.de

United Kingdom

+44 (0) 1442 212020
sales@newland-id.co.uk

France

+39 (0) 345 8804096
france@newland-id.com

Russia

+31 (0) 345 87 00 33
russia@newland-id.com

Benelux

+31 (0) 345 87 00 33
benelux@newland-id.com

South Africa

Gauteng: +27 (0) 11 553 8010
Cape Town: +27 (0) 21 9140819
info@newland-id.co.za

Ibérica

+34 (0) 93 303 74 66
info@newland-id.es

Middle East

+39 (0) 345 8804096
middleeast@newland-id.com

Italy

+39 (0) 342 0562227
italy@newland-id.com

Turkey

+90 (0) 544 538 40 49
turkey@newland-id.com

Nordic & Baltic

+46 (0) 70 88 47 767
nordic@newland-id.com

Iran

+90 (0) 544 538 40 49
iran@newland-id.com